


Wall Mounting Standoffs


Included:




Stud x4



Washer x8



Screw x 4

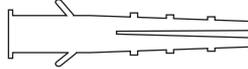

DRY WALL ANCHOR x 4



BARREL x 4

- Step 1) a. If standoff kit was purchased separate from the sign. You will need to drill four 3/8" holes in the backing of your sign to attach the standoffs.
b. If standoff kit was purchased with a sign the holes will be pre-drilled for you.

Step 2) Transfer standoff holes to wall.

Step 3) Use the appropriate anchors and screws to attach the barrels of the standoffs to wall.

Step 4) With a washer on both sides of the backing, slide the studs onto the sign.

Step 5) Thread the studs into the barrels and tighten until secure.